

VIPA SPEED7 Library

OPL_SP7-LIB | SW90LS0MA V10.002 | Manual

HB00 | OPL_SP7-LIB | SW90LS0MA V10.002 | en | 17-35

Block library - Device Specific



VIPA GmbH
Ohmstr. 4
91074 Herzogenaurach
Telephone: +49 9132 744-0
Fax: +49 9132 744-1864
Email: info@vipa.com
Internet: www.vipa.com

Table of contents

1	General	4
1.1	Copyright © VIPA GmbH	4
1.2	About this manual.....	5
2	Important notes	6
2.1	Internally used blocks.....	6
3	Include library	7
3.1	Integration into Siemens SIMATIC Manager.....	7
3.2	Integration into Siemens TIA Portal.....	8
4	Block parameters	9
4.1	General and Specific Error Information RET_VAL.....	9
5	Device Specific	12
5.1	Frequency Measurement.....	12
5.1.1	FC 300 ... 303 - Frequency measurement SLIO consistent.....	12
5.1.2	FC 300 - FM_SET_CONTROL - Control frequency measurement consistent.....	12
5.1.3	FC 301 - FM_GET_PERIOD - Calculate period duration consistent.....	14
5.1.4	FC 302 - FM_GET_FREQUENCY - Calculate frequency consistent.....	16
5.1.5	FC 303 - FM_GET_SPEED - Calculate rotational speed consistent.....	18
5.1.6	FC 310 ... 313 - Frequency measurement SLIO.....	20
5.1.7	FC 310 - FM_CONTROL - Control frequency measurement.....	21
5.1.8	FC 311 - FM_CALC_PERIOD - Calculate period duration	22
5.1.9	FC 312 - FM_CALC_FREQUENCY - Calculate frequency.....	24
5.1.10	FC 313 - FM_CALC_SPEED - Calculate rotational speed.....	26
5.2	Energy Measurement.....	29
5.2.1	FB 325 - EM_COM_1 - Communication with 031-1PA00.....	29
5.2.2	UDT 325 - EM_DATA_R1 - Data structure for FB 325.....	29
5.3	Motion Modules.....	31
5.3.1	FB 320 - ACYC_RW - Acyclic access to the System SLIO motion module.....	31
5.3.2	FB 321 - ACYC_DS - Acyclic parametrization System SLIO motion module.....	34
5.3.3	UDT 321 - ACYC_OBJECT-DATA - Data structure for FB 321.....	37
5.4	WLD.....	38
5.4.1	FB 240 - RAM_to_s7prog.wld - RAM to s7prog.wld.....	38
5.4.2	FB 241 - RAM_to_autoload.wld - RAM to autoload.wld.....	38
5.5	Onboard I/O System 100V.....	39
5.5.1	SFC 223 - PWM - Pulse duration modulation.....	39
5.5.2	SFC 224 - HSC - High-speed-Counter.....	40
5.5.3	SFC 225 - HF_PWM - HF pulse duration modulation.....	42

1 General

1.1 Copyright © VIPA GmbH

All Rights Reserved

This document contains proprietary information of VIPA and is not to be disclosed or used except in accordance with applicable agreements.

This material is protected by the copyright laws. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to VIPA), except in accordance with applicable agreements, contracts or licensing, without the express written consent of VIPA and the business management owner of the material.

For permission to reproduce or distribute, please contact: VIPA, Gesellschaft für Visualisierung und Prozessautomatisierung mbH Ohmstraße 4, D-91074 Herzogenaurach, Germany

Tel.: +49 9132 744 -0

Fax.: +49 9132 744-1864

E-Mail: info@vipa.de

<http://www.vipa.com>



Every effort has been made to ensure that the information contained in this document was complete and accurate at the time of publishing. Nevertheless, the authors retain the right to modify the information.

This customer document describes all the hardware units and functions known at the present time. Descriptions may be included for units which are not present at the customer site. The exact scope of delivery is described in the respective purchase contract.

CE Conformity Declaration

Hereby, VIPA GmbH declares that the products and systems are in compliance with the essential requirements and other relevant provisions. Conformity is indicated by the CE marking affixed to the product.

Conformity Information

For more information regarding CE marking and Declaration of Conformity (DoC), please contact your local VIPA customer service organization.

Trademarks

VIPA, SLIO, System 100V, System 200V, System 300V, System 300S, System 400V, System 500S and Commander Compact are registered trademarks of VIPA Gesellschaft für Visualisierung und Prozessautomatisierung mbH.

SPEED7 is a registered trademark of profichip GmbH.

SIMATIC, STEP, SINEC, TIA Portal, S7-300 and S7-400 are registered trademarks of Siemens AG.

Microsoft and Windows are registered trademarks of Microsoft Inc., USA.

Portable Document Format (PDF) and Postscript are registered trademarks of Adobe Systems, Inc.

All other trademarks, logos and service or product marks specified herein are owned by their respective companies.

Information product support

Contact your local VIPA Customer Service Organization representative if you wish to report errors or questions regarding the contents of this document. If you are unable to locate a customer service centre, contact VIPA as follows:

VIPA GmbH, Ohmstraße 4, 91074 Herzogenaurach, Germany

Telefax: +49 9132 744-1204

E-Mail: documentation@vipa.de

Technical support

Contact your local VIPA Customer Service Organization representative if you encounter problems with the product or have questions regarding the product. If you are unable to locate a customer service centre, contact VIPA as follows:

VIPA GmbH, Ohmstraße 4, 91074 Herzogenaurach, Germany

Tel.: +49 9132 744-1150 (Hotline)

E-Mail: support@vipa.de

1.2 About this manual

Objective and contents

The manual describes the block library '*Device Specific*' from VIPA:

- It contains a description of the structure, project implementation and usage in several programming systems.
- The manual is targeted at users who have a background in automation technology.
- The manual is available in electronic form as PDF file. This requires Adobe Acrobat Reader.
- The manual consists of chapters. Every chapter provides a self-contained description of a specific topic.
- The following guides are available in the manual:
 - An overall table of contents at the beginning of the manual
 - References with pages numbers

Icons Headings

Important passages in the text are highlighted by following icons and headings:



DANGER!

Immediate or likely danger. Personal injury is possible.



CAUTION!

Damages to property is likely if these warnings are not heeded.



Supplementary information and useful tips.

2 Important notes



In the following, you will find important notes, which must always be observed when using the blocks.

2.1 Internally used blocks



CAUTION!

The following blocks are used internally and must not be overwritten! The direct call of an internal block leads to errors in the corresponding instance DB! Please always use the corresponding function for the call.

FC/SFC	Designation	Description
FC/SFC 192	CP_S_R	is used internally for FB 7 and FB 8
FC/SFC 196	AG_CNTRL	is used internally for FC 10
FC/SFC 200	AG_GET	is used internally for FB/SFB 14
FC/SFC 201	AG_PUT	is used internally for FB/SFB 15
FC/SFC 202	AG_BSEND	is used internally for FB/SFB 12
FC/SFC 203	AG_BRCV	is used internally for FB/SFB 13
FC/SFC 204	IP_CONF	is used internally for FB 55 IP_CONF
FC/SFC 205	AG_SEND	is used internally for FC 5 AG_SEND
FC/SFC 206	AG_RECV	is used internally for FC 6 AG_RECV
FC/SFC 253	IBS_ACCESS	is used internally for SPEED bus INTERBUS masters
SFB 238	EC_RWOD	is used internally for EtherCAT Communication
SFB 239	FUNC	is used internally for FB 240, FB 241

3 Include library

Block library 'Device Specific'

The block library can be found for download in the 'Service/Support' area of www.vipa.com at 'Downloads → VIPA Lib' as 'Block library Device Specific - SW90LS0MA'. The library is available as packed zip file. As soon as you want to use these blocks you have to import them into your project.

3.1 Integration into Siemens SIMATIC Manager

Overview

The integration into the Siemens SIMATIC Manager requires the following steps:

1. Load ZIP file
2. "Retrieve" the library
3. Open library and transfer blocks into the project

Load ZIP file

1. Navigate on the web page to the desired ZIP file, load and store it in your work directory.

Retrieve library

1. Start the Siemens SIMATIC Manager with your project.
2. Open the dialog window for ZIP file selection via 'File → Retrieve'.
3. Select the according ZIP file and click at [Open].
4. Select a destination folder where the blocks are to be stored.
5. Start the extraction with [OK].

Open library and transfer blocks into the project

1. Open the library after the extraction.
 2. Open your project and copy the necessary blocks from the library into the directory "blocks" of your project.
- ⇒ Now you have access to the VIPA specific blocks via your user application.



Are FCs used instead of SFCs, so they are supported by the VIPA CPUs starting from firmware 3.6.0.

3.2 Integration into Siemens TIA Portal

Overview

The integration into the Siemens TIA Portal requires the following steps:

1. Load ZIP file
2. Unzip the Zip file
3. Open library and transfer blocks into the project

Load ZIP file


1. Navigate on the web page to the ZIP file, that matches your version of the program.
2. Load and store it in your work directory.

Unzip the Zip file

- Unzip the zip file to a work directory of the Siemens TIA Portal with your unzip application.

Open library and transfer blocks into the project

1. Start the Siemens TIA Portal with your project.
2. Switch to the *Project view*.
3. Choose "Libraries" from the task cards on the right side.
4. Click at "Global libraries".
5. Click at "Open global libraries".
6. Navigate to your work directory and load the file ..._TIA.al1x.

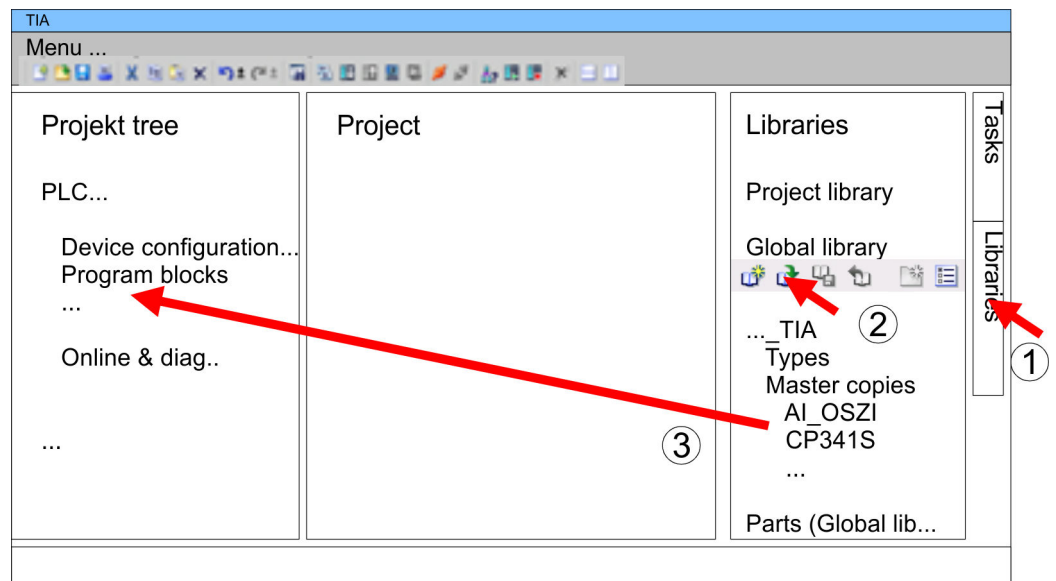

7. Copy the necessary blocks from the library into the "Program blocks" of the *Project tree* of your project. Now you have access to the VIPA specific blocks via your user application.

4 Block parameters

4.1 General and Specific Error Information RET_VAL

Overview

The return value *RET_VAL* of a system function provides one of the following types of error codes:

- A *general error code*, that relates to errors that can occur in anyone SFC.
- A *specific error code*, that relates only to the particular SFC.

Although the data type of the output parameter *RET_VAL* is integer (INT), the error codes for system functions are grouped according to hexadecimal values.

If you want to examine a return value and compare the value with the error codes, then display the error code in hexadecimal format.

RET_VAL (Return value)

The table below shows the structure of a system function error code:

Bit	Description
7 ... 0	Event number or error class and single error
14 ... 8	Bit 14 ... 8 = "0": Specific error code The specific error codes are listed in the descriptions of the individual SFCs. Bit 14 ... 8 > "0": General error code The possible general error codes are shown
15	Bit 15 = "1": indicates that an error has occurred.

Specific error code

This error code indicates that an error pertaining to a particular system function occurred during execution of the function.

A specific error code consists of the following two numbers:

- Error class between 0 and 7
- Error number between 0 and 15

Bit	Description
3 ... 0	Error number
6 ... 4	Error class
7	Bit 7 = "1"
14 ... 8	Bit 14 ... 8 = "0"
15	Bit 15 = "1": indicates that an error has occurred.

General error codes RET_VAL

The parameter *RET_VAL* of some SFCs only returns general error information. No specific error information is available.

The general error code contains error information that can result from any system function. The general error code consists of the following two numbers:

- A parameter number between 1 and 111, where 1 indicates the first parameter of the SFC that was called, 2 the second etc.
- An event number between 0 and 127. The event number indicates that a synchronous fault has occurred.

Bit	Description
7 ... 0	Event number
14 ... 8	Parameter number
15	Bit 15 = "1": indicates that an error has occurred.

The following table explains the general error codes associated with a return value. Error codes are shown as hexadecimal numbers. The x in the code number is only used as a placeholder. The number represents the parameter of the system function that has caused the error.

General error codes

Error code	Description
8x7Fh	Internal Error. This error code indicates an internal error at parameter x. This error did not result from the actions if the user and he/she can therefore not resolve the error.
8x01h	Illegal syntax detection for an ANY parameter.
8x22h	Area size error when a parameter is being read.
8x23h	Area size error when a parameter is being written. This error code indicates that parameter x is located either partially or fully outside of the operand area or that the length of the bit-field for an ANY-parameter is not divisible by 8.
8x24h	Area size error when a parameter is being read.
8x25h	Area size error when a parameter is being written. This error code indicates that parameter x is located in an area that is illegal for the system function. The description of the respective function specifies the areas that are not permitted for the function.
8x26h	The parameter contains a number that is too high for a time cell. This error code indicates that the time cell specified in parameter x does not exist.
8x27h	The parameter contains a number that is too high for a counter cell (numeric fields of the counter). This error code indicates that the counter cell specified in parameter x does not exist.
8x28h	Orientation error when reading a parameter.
8x29h	Orientation error when writing a parameter. This error code indicates that the reference to parameter x consists of an operand with a bit address that is not equal to 0.
8x30h	The parameter is located in the write-protected global-DB.
8x31h	The parameter is located in the write-protected instance-DB. This error code indicates that parameter x is located in a write-protected data block. If the data block was opened by the system function itself, then the system function will always return a value 8x30h.
8x32h	The parameter contains a DB-number that is too high (number error of the DB).
8x34h	The parameter contains a FC-number that is too high (number error of the FC).
8x35h	The parameter contains a FB-number that is too high (number error of the FB). This error code indicates that parameter x contains a block number that exceeds the maximum number permitted for block numbers.
8x3Ah	The parameter contains the number of a DB that was not loaded.
8x3Ch	The parameter contains the number of a FC that was not loaded.
8x3Eh	The parameter contains the number of a FB that was not loaded.
8x42h	An access error occurred while the system was busy reading a parameter from the peripheral area of the inputs.

Error code	Description
8x43h	An access error occurred while the system was busy writing a parameter into den peripheral area of the outputs.
8x44h	Error during the n-th ($n > 1$) read access after an error has occurred.
8x45h	Error during the n-th ($n > 1$) write access after an error has occurred. This error code indicates that access was denied to the requested parameter.

5 Device Specific

5.1 Frequency Measurement

5.1.1 FC 300 ... 303 - Frequency measurement SLIO consistent

Overview

The following VIPA specific functions are used to control the System SLIO frequency measurement modules, which are connected via PROFIBUS, PROFINET or EtherCAT. The usage with EtherCAT is only possible at an EtherCAT CPU from VIPA. By this functions SFC 14 - DPRD_DAT respectively SFC 15 - DPWR_DAT for consistent read respectively write access to the data are internally called. Error messages of these blocks are reported by the parameter *ERROR*.

Function	Symbol	Comment
FC 300	FM_SET_CONTROL	Function to control the frequency measurement with integrated consistent access.
FC 301	FM_GET_PERIOD	Function to calculate the period duration with integrated consistent access.
FC 302	FM_GET_FREQUENCY	Function to calculate the frequency with integrated consistent access.
FC 303	FM_GET_SPEED	Function to calculate the rotational speed with integrated consistent access.

5.1.2 FC 300 - FM_SET_CONTROL - Control frequency measurement consistent

Description

The System SLIO Frequency measurement module is controlled by the FC 300 FM_SET_CONTROL. By this function the SFC 15 - DPWR_DAT for consistent write access of data is called. Here error messages of the block are reported by *ERROR*.

5.1.2.1 Parameters

Parameter	Declaration	Data type	Memory block	Description
ENABLE_FM	INPUT	BOOL	I, Q, M, D, L	Enable frequency measurement
LADDR_OUT	INPUT	WORD	I, Q, M, D, L	Logical base address
PRESET_CH0	INPUT	DINT	I, Q, M, D, L	Channel 0: Measurement period
PRESET_CH1	INPUT	DINT	I, Q, M, D, L	Channel 1: Measurement period
DONE	OUTPUT	BOOL	I, Q, M, D, L	Ready signal (TRUE = OK)
ERROR	OUTPUT	WORD	I, Q, M, D, L	Return value (0 = OK)

ENABLE_FM

With setting *ENABLE_FM* the *measuring periods*, which were preset by PRESET_CH0/1, are transferred to the channels and the measurement of both channels are started. Both frequency meters are stopped by resetting *ENABLE_FM*.



Only while *ENABLE_FM* is set, evaluated values can be retrieved from the module. Otherwise you get the error message that the channels are disabled.

LADDR_OUT Configured base address of the output area of the System SLIO frequency measurement module, which is to be written to. The address must be in hexadecimal notation.
(Example: Address 100: *LADDR_OUT* := W#16#64).

PRESET_CHx Enter here the measurement period in μs for the corresponding channel.
Range of values: $1\mu\text{s} \dots 8\,388\,607\mu\text{s}$

DONE Ready signal of the function

- TRUE: Function was finished without error.
- FALSE: Function is not active respectively there is an error.

ERROR (Return value) The following code can be reported:

Code	Description
0x0000	No error
0x80D2	Channel 0: Input value measurement period ≤ 0
0x80D3	Channel 1: Input value measurement period ≤ 0
0x80D4	Channel 0: Input value measurement period $> 8\,388\,607\mu\text{s}$
0x80D5	Channel 1: Input value measurement period $> 8\,388\,607\mu\text{s}$

5.1.2.2 Errors of the internally called SFC 15

Code	Description
0x808x	System error on the bus coupler
0x8090	<i>LADDR_OUT</i> is wrong, possible reasons: <ul style="list-style-type: none"> ■ there is no module configured on this address ■ limitation of the length of consistent data was not considered ■ Basic address in parameter <i>LADDR_OUT</i> was not entered in hexadecimal type
0x8093	There is no bus coupler existing for <i>LADDR_OUT</i> , from which consistent data can be read.
0x80A0	An access error was detected during peripheral access.
0x80B0	System error on the bus coupler
0x80B1	Specified length of the source area does not correspond to the configured user data length.
0x80B2	System error on the bus coupler

Code	Description
0x80B3	System error on the bus coupler
0x80C1	The data from the previous read request on the module are not processed by the module, yet.
0x80C2	System error on the bus coupler
0x80Fx	System error on the bus coupler
0x85xy	System error on the bus coupler
0x8xyy	General error information ↪ Chapter 4.1 'General and Specific Error Information RET_VAL' on page 9

5.1.3 FC 301 - FM_GET_PERIOD - Calculate period duration consistent

Description

With the FC 301 FM_GET_PERIOD, you can calculate the period duration of the input signals of both channels. By this function internally SFC 14 - DPRD_DAT for consistent reading of user data is called. Here, the error messages of the function block are returned by *ERROR*.

5.1.3.1 Parameters

Parameter	Declaration	Data type	Memory block	Description
LADDR_IN	INPUT	WORD	I, Q, M, D, L	Logical base input address
DONE	OUTPUT	BOOL	I, Q, M, D, L	Ready signal (TRUE = OK)
ERROR	OUTPUT	WORD	I, Q, M, D, L	Return value (0 = OK)
PERIOD_CH0	OUTPUT	DINT	I, Q, M, D, L	Channel 0: Period duration
PERIOD_CH1	OUTPUT	DINT	I, Q, M, D, L	Channel 1: Period duration

LADDR_IN

Configured base address of the input area of the System SLIO frequency measurement module, which is to be read from. The address must be in hexadecimal notation.

(Example: Address 100: *LADDR_IN*: = W#16#64).

DONE

Ready signal of the function

- TRUE: Function was finished without error.
- FALSE: Function is not active respectively there is an error.

PERIOD_CHx

Currently determined period duration of the corresponding channel in 100ns.

ERROR (Return value)

The following codes can be returned:

Code	Description
0x0000	No error
0x80D0	Channel 0 not in status active
0x80D1	Channel 1 not in status active
0x80DC	Channel 0: Measured time value < 0
0x80DD	Channel 1: Measured time value < 0
0x80DE	Channel 0: Measured time value > 0x7FFFFFFF
0x80DF	Channel 1: Measured time value > 0x7FFFFFFF
0x80E0	Channel 0: Determined number of edges = 0
0x80E1	Channel 1: Determined number of edges = 0
0x80E2	Channel 0: Determined number of edges < 0
0x80E3	Channel 1: Determined number of edges < 0
0x80E4	Channel 0: Determined number of edges > 0xFFFFFFFF
0x80E5	Channel 1: Determined number of edges > 0xFFFFFFFF
0x80E8	Channel 0: No valid measurement within the entered measurement period.
0x80E9	Channel 1: No valid measurement within the entered measurement period.

5.1.3.2 Error of the internal called SFC 14

Code	Description
0x808x	System error on the bus coupler
0x8090	<i>LADDR_IN</i> is not correct, possible reasons: <ul style="list-style-type: none"> ■ there is no module configured on this address ■ limitation of the length of consistent data was not considered ■ Basic address in parameter <i>LADDR_IN</i> was not entered in hexadecimal type
0x8093	There is no bus coupler existing for <i>LADDR_IN</i> , to which consistent data can be written.
0x80A0	An access error was detected during peripheral access.
0x80B0	System error on the bus coupler
0x80B1	Specified length of the source area does not correspond to the configured user data length.
0x80B2	System error on the bus coupler
0x80B3	System error on the bus coupler
0x80C1	The data from the previous write request on the module are not processed by the module, yet.
0x80C2	System error on the bus coupler

Code	Description
0x80Fx	System error on the bus coupler
0x85xy	System error on the bus coupler
0x8xyy	General error information ↗ Chapter 4.1 'General and Specific Error Information RET_VAL' on page 9

5.1.4 FC 302 - FM_GET_FREQUENCY - Calculate frequency consistent

Description

With the FC 302 FM_GET_FREQUENCY, you can calculate the frequency of the input signals of both channels. By this function internally SFC 14 - DPRD_DAT for consistent reading of user data is called. Here, the error messages of the function block are returned by *ERROR*.

5.1.4.1 Parameters

Parameter	Declaration	Data type	Memory block	Description
LADDR_IN	INPUT	WORD	I, Q, M, D, L	Logical base input address
DONE	OUTPUT	BOOL	I, Q, M, D, L	Ready signal (TRUE = OK)
ERROR	OUTPUT	WORD	I, Q, M, D, L	Return value (0 = OK)
FREQUENCY_CH0	OUTPUT	DINT	I, Q, M, D, L	Channel 0: Frequency
FREQUENCY_CH1	OUTPUT	DINT	I, Q, M, D, L	Channel 1: Frequency

LADDR_IN

Configured base address of the input area of the System SLIO frequency measurement module, which is to be read from. The address must be in hexadecimal notation.

(Example: Address 100: *LADDR_IN*: = W#16#64).

DONE

Ready signal of the function

- TRUE: Function was finished without error.
- FALSE: Function is not active respectively there is an error.

FREQUENCY_CHx

Currently determined frequency of the corresponding channel in mHz.

ERROR (Return value)

The following codes can be returned:

Code	Description
0x0000	No error
0x80D0	Channel 0 not in status active
0x80D1	Channel 1 not in status active

Code	Description
0x80DA	Channel 0: Measured time value = 0
0x80DB	Channel 1: Measured time value = 0
0x80DC	Channel 0: Measured time value < 0
0x80DD	Channel 1: Measured time value < 0
0x80DE	Channel 0: Measured time value > 0x7FFFFFFF
0x80DF	Channel 1: Measured time value > 0x7FFFFFFF
0x80E2	Channel 0: Determined number of edges < 0
0x80E3	Channel 1: Determined number of edges < 0
0x80E4	Channel 0: Determined number of edges > 0xFFFFFFFF
0x80E5	Channel 1: Determined number of edges > 0xFFFFFFFF
0x80E6	Channel 0: Frequency > 600kHz
0x80E7	Channel 1: Frequency > 600kHz
0x80E8	Channel 0: No valid measurement within the entered measurement period.
0x80E9	Channel 1: No valid measurement within the entered measurement period.

5.1.4.2 Error of the internal called SFC 14

Code	Description
0x808x	System error on the bus coupler
0x8090	<i>LADDR_IN</i> is not correct, possible reasons: <ul style="list-style-type: none"> ■ there is no module configured on this address ■ limitation of the length of consistent data was not considered ■ Basic address in parameter <i>LADDR_IN</i> was not entered in hexadecimal type
0x8093	There is no bus coupler existing for <i>LADDR_IN</i> , to which consistent data can be written.
0x80A0	An access error was detected during peripheral access.
0x80B0	System error on the bus coupler
0x80B1	Specified length of the source area does not correspond to the configured user data length.
0x80B2	System error on the bus coupler
0x80B3	System error on the bus coupler
0x80C1	The data from the previous write request on the module are not processed by the module, yet.
0x80C2	System error on the bus coupler
0x80Fx	System error on the bus coupler

Code	Description
0x85xy	System error on the bus coupler
0x8xyy	General error information ↪ Chapter 4.1 'General and Specific Error Information RET_VAL' on page 9

5.1.5 FC 303 - FM_GET_SPEED - Calculate rotational speed consistent

Description

With the FC 303 FM_GET_SPEED, you can calculate the rotational speed of the input signals of both channels. By this function internally SFC 14 - DPRD_DAT for consistent reading of user data is called. Here, the error messages of the function block are returned by *ERROR*.

5.1.5.1 Parameters

Parameter	Declaration	Data type	Memory block	Description
LADDR_IN	INPUT	WORD	I, Q, M, D, L	Logical base input address
RESOLUTION_CH0	INPUT	DINT	I, Q, M, D, L	Channel 0: Resolution of the sensor
RESOLUTION_CH1	INPUT	DINT	I, Q, M, D, L	Channel 1: Resolution of the sensor
DONE	OUTPUT	BOOL	I, Q, M, D, L	Ready signal (TRUE = OK)
ERROR	OUTPUT	WORD	I, Q, M, D, L	return value (0 = OK)
SPEED_CH0	OUTPUT	DINT	I, Q, M, D, L	Channel 0: Rotational speed
SPEED_CH1	OUTPUT	DINT	I, Q, M, D, L	Channel 1: Rotational speed

LADDR_IN

Configured base address of the input area of the System SLIO frequency measurement module, which is to be read from. The address must be in hexadecimal notation.

(Example: Address 100: *LADDR_IN*: = W#16#64).

RESOLUTION_CHx

Enter here the resolution in increments per revolution for the corresponding channel .

DONE

Ready signal of the function

- TRUE: Function was finished without error.
- FALSE: Function is not active respectively there is an error.

SPEED_CHx

Currently determined rotational speed of the corresponding channel in revolutions per minute (rpm).

ERROR (Return value)

The following codes can be returned:

Code	Description
0x0000	No error
0x80D0	Channel 0 not in status active
0x80D1	Channel 1 not in status active
0x80D6	Channel 0: Input value RESOLUTION_CH0 = 0
0x80D7	Channel 1: Input value RESOLUTION_CH1 = 0
0x80D8	Channel 0: Input value RESOLUTION_CH0 < 0
0x80D9	Channel 1: Input value RESOLUTION_CH1 < 0
0x80DA	Channel 0: Measured time value = 0
0x80DB	Channel 1: Measured time value = 0
0x80DC	Channel 0: Measured time value < 0
0x80DD	Channel 1: Measured time value < 0
0x80DE	Channel 0: Measured time value > 0x7FFFFFFF
0x80DF	Channel 1: Measured time value > 0x7FFFFFFF
0x80E2	Channel 0: Determined number of edges < 0
0x80E3	Channel 1: Determined number of edges < 0
0x80E4	Channel 0: Determined number of edges > 0xFFFFFFFF
0x80E5	Channel 1: Determined number of edges > 0xFFFFFFFF
0x80E6	Channel 0: Determined rotational speed > max (DINT)
0x80E7	Channel 1: Determined rotational speed > max (DINT)
0x80E8	Channel 0: No valid measurement within the entered measurement period.
0x80E9	Channel 1: No valid measurement within the entered measurement period.

5.1.5.2 Error of the internal called SFC 14

Code	Description
0x808x	System error on the bus coupler
0x8090	<i>LADDR_IN</i> is not correct, possible reasons: <ul style="list-style-type: none"> ■ there is no module configured on this address ■ limitation of the length of consistent data was not considered ■ Basic address in parameter <i>LADDR_IN</i> was not entered in hexadecimal type
0x8093	There is no bus coupler existing for <i>LADDR_IN</i> , to which consistent data can be written.
0x80A0	An access error was detected during peripheral access.
0x80B0	System error on the bus coupler
0x80B1	Specified length of the source area does not correspond to the configured user data length.
0x80B2	System error on the bus coupler
0x80B3	System error on the bus coupler
0x80C1	The data from the previous write request on the module are not processed by the module, yet.
0x80C2	System error on the bus coupler
0x80Fx	System error on the bus coupler
0x85xy	System error on the bus coupler
0x8xyy	General error information ↪ Chapter 4.1 'General and Specific Error Information RET_VAL' on page 9

5.1.6 FC 310 ... 313 - Frequency measurement SLIO

Overview

The following VIPA specific functions are used to control the System SLIO frequency measurement modules, if the consistency of the data are ensured by the bus protocol and consistent reading respectively writing with SFC 14 respectively SFC 15 is not possible. Within the functions there are "FM_..." parameters, whose content is to be consistently connected to the corresponding input or output area of the frequency measurement module by means of the bus system. By calling the appropriate function the corresponding "FM_..." parameters are automatically filled by the function.

Function	Symbol	Comment
FC 310	FM_CONTROL	Function to control the frequency measurement
FC 311	FM_CALC_PERIOD	Function to calculate the period duration
FC 312	FM_CALC_FREQUENCY	Function to calculate the frequency
FC 313	FM_CALC_SPEED	Function to calculate the rotational speed

5.1.7 FC 310 - FM_CONTROL - Control frequency measurement

Description

The System SLIO Frequency measurement module is controlled by the FC 310 FM_CONTROL. Since this FC does not internally call a block for consistent write access of data, you have to ensure consistent data transfer in your system.

5.1.7.1 Parameters

Parameter	Declaration	Data type	Memory block	Description
ENABLE_FM	INPUT	BOOL	I, Q, M, D, L	Enable frequency measurement
PRESET_CH0	INPUT	DINT	I, Q, M, D, L	Channel 0: Measurement period
PRESET_CH1	INPUT	DINT	I, Q, M, D, L	Channel 1: Measurement period
DONE	OUTPUT	BOOL	I, Q, M, D, L	Ready signal (TRUE = OK)
ERROR	OUTPUT	WORD	I, Q, M, D, L	return value (0 = OK)
FM_PRESET_PERIOD_CH0	OUTPUT	DWORD	I, Q, M, D, L	Setpoint value for frequency measurement module output address: +0
FM_PRESET_PERIOD_CH1	OUTPUT	DWORD	I, Q, M, D, L	Setpoint value for frequency measurement module output address: +4
FM_CONTROL_CH0	OUTPUT	WORD	I, Q, M, D, L	Setpoint value for frequency measurement module output address: +8
FM_CONTROL_CH1	OUTPUT	WORD	I, Q, M, D, L	Setpoint value for frequency measurement module output address: +10

ENABLE_FM

With setting *ENABLE_FM* the corresponding CONTROL is generated and issued via *FM_CONTROL_CHx*. The measurement of both channels is started as soon as the content of *FM_CONTROL_CHx* was consistent transferred by the bus system to the frequency measurement module. The measurement of both channels is stopped by resetting *ENABLE_FM*, after *FM_CONTROL_CHx* was consistent transferred to the frequency measurement module.



Only as long as the frequency meters are started, evaluated values can be retrieved from the module. Otherwise you get the error message that the channels are disabled.

PRESET_CHx Enter here the measurement period in μs for the corresponding channel.
Range of values: $1\mu\text{s} \dots 8\,388\,607\mu\text{s}$

DONE Ready signal of the function

- TRUE: Function was finished without error.
- FALSE: Function is not active respectively there is an error.

FM_PRESET_PERIOD_CHx This parameter contains the measuring period for channel 0 respectively channel 1. The content is to be consistent connected with address +0 respectively +4 of the output area of the frequency measurement module, via the according bus system.

FM_CONTROL_CHx This parameter contains CONTROL, which is generated by *ENABLE_FM*. The content for channel 0 respectively channel 1 is to be consistent connected with address +8 respectively +10 of the output area of the frequency measurement module, via the according bus system.

ERROR (Return value) The following code can be reported:

Code	Description
0x0000	No error
0x80D2	Channel 0: Input value measurement period ≤ 0
0x80D3	Channel 1: Input value measurement period ≤ 0
0x80D4	Channel 0: Input value measurement period $> 8\,388\,607\mu\text{s}$
0x80D5	Channel 1: Input value measurement period $> 8\,388\,607\mu\text{s}$

5.1.8 FC 311 - FM_CALC_PERIOD - Calculate period duration

Description

With the FC 311 FM_CALC_PERIOD, you can calculate the period duration of the input signals of both channels. Since this FC does not internally call a block for consistent read access of data, you have to ensure consistent data transfer in your system.

5.1.8.1 Parameters

Parameter	Declaration	Data type	Memory block	Description
FM_PERIOD_CH0	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +0
FM_PERIOD_CH1	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +4
FM_RISING_EDGES_CH0	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +8
FM_RISING_EDGES_CH1	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +12
FM_STATUS_CH0	INPUT	WORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +16
FM_STATUS_CH1	INPUT	WORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +18
DONE	OUTPUT	BOOL	I, Q, M, D, L	Ready signal (TRUE = OK)
ERROR	OUTPUT	WORD	I, Q, M, D, L	Return value (0 = OK)
PERIOD_CH0	OUTPUT	DINT	I, Q, M, D, L	Channel 0: Period duration
PERIOD_CH1	OUTPUT	DINT	I, Q, M, D, L	Channel 1: Period duration

FM_PERIOD_CHx This parameter contains the measured time value of channel 0 respectively channel 1. The content is to be consistent connected with address +0 respectively +4 of the input area of the frequency measurement module, via the according bus system.

FM_RISING_EDGES_CHx This parameter contains the determined number of rising edges for channel 0 respectively channel 1. The content is to be consistent connected with address +8 respectively +12 of the input area of the frequency measurement module, via the according bus system.

FM_STATUS_CHx This parameter contains the status of channel 0 respectively channel 1. The content is to be consistent connected with address +16 respectively +18 of the input area of the frequency measurement module, via the according bus system.

- DONE** Ready signal of the function
- TRUE: Function was finished without error.
 - FALSE: Function is not active respectively there is an error.
- PERIOD_CHx** Currently determined period duration of the corresponding channel in 100ns.
- ERROR (Return value)** The following codes can be returned:

Code	Description
0x0000	No error
0x80D0	Channel 0 not in status active
0x80D1	Channel 1 not in status active
0x80DC	Channel 0: Measured time value < 0
0x80DD	Channel 1: Measured time value < 0
0x80DE	Channel 0: Measured time value > 0x7FFFFFFF
0x80DF	Channel 1: Measured time value > 0x7FFFFFFF
0x80E0	Channel 0: Determined number of edges = 0
0x80E1	Channel 1: Determined number of edges = 0
0x80E2	Channel 0: Determined number of edges < 0
0x80E3	Channel 1: Determined number of edges < 0
0x80E4	Channel 0: Determined number of edges > 0xFFFFFFFF
0x80E5	Channel 1: Determined number of edges > 0xFFFFFFFF
0x80E8	Channel 0: No valid measurement within the entered measurement period.
0x80E9	Channel 1: No valid measurement within the entered measurement period.

5.1.9 FC 312 - FM_CALC_FREQUENCY - Calculate frequency

Description

With the FC 312 FM_CALC_FREQUENCY, you can calculate the period duration of the input signals of both channels. Since this FC does not internally call a block for consistent read access of data, you have to ensure consistent data transfer in your system.

5.1.9.1 Parameters

Parameter	Declaration	Data type	Memory block	Description
FM_PERIOD_CH0	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +0
FM_PERIOD_CH1	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +4
FM_RISING_EDGES_CH0	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +8
FM_RISING_EDGES_CH1	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +12
FM_STATUS_CH0	INPUT	WORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +16
FM_STATUS_CH1	INPUT	WORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +18
DONE	OUTPUT	BOOL	I, Q, M, D, L	Ready signal (TRUE = OK)
ERROR	OUTPUT	WORD	I, Q, M, D, L	Return value (0 = OK)
FREQUENCY_CH0	OUTPUT	DINT	I, Q, M, D, L	Channel 0: Calculated frequency
FREQUENCY_CH1	OUTPUT	DINT	I, Q, M, D, L	Channel 1: Calculated frequency

FM_PERIOD_CHx This parameter contains the measured time value of channel 0 respectively channel 1. The content is to be consistent connected with address +0 respectively +4 of the input area of the frequency measurement module, via the according bus system.

FM_RISING_EDGES_CHx This parameter contains the determined number of rising edges for channel 0 respectively channel 1. The content is to be consistent connected with address +8 respectively +12 of the input area of the frequency measurement module, via the according bus system.

FM_STATUS_CHx This parameter contains the status of channel 0 respectively channel 1. The content is to be consistent connected with address +16 respectively +18 of the input area of the frequency measurement module, via the according bus system.

- DONE** Ready signal of the function
- TRUE: Function was finished without error.
 - FALSE: Function is not active respectively there is an error.
- FREQUENCY_CHx** Currently determined frequency of the corresponding channel in mHz.
- ERROR (Return value)** The following codes can be returned:

Code	Description
0x0000	No error
0x80D0	Channel 0 not in status active
0x80D1	Channel 1 not in status active
0x80DA	Channel 0: Measured time value = 0
0x80DB	Channel 1: Measured time value = 0
0x80DC	Channel 0: Measured time value < 0
0x80DD	Channel 1: Measured time value < 0
0x80DE	Channel 0: Measured time value > 0x7FFFFFFF
0x80DF	Channel 1: Measured time value > 0x7FFFFFFF
0x80E2	Channel 0: Determined number of edges < 0
0x80E3	Channel 1: Determined number of edges < 0
0x80E4	Channel 0: Determined number of edges > 0xFFFFFFFF
0x80E5	Channel 1: Determined number of edges > 0xFFFFFFFF
0x80E6	Channel 0: Frequency > 600kHz
0x80E7	Channel 1: Frequency > 600kHz
0x80E8	Channel 0: No valid measurement within the entered measurement period.
0x80E9	Channel 1: No valid measurement within the entered measurement period.

5.1.10 FC 313 - FM_CALC_SPEED - Calculate rotational speed

Description

With the FC 313 FM_CALC_SPEED, you can calculate the velocity of the input signals of both channels. Since this FC does not internally call a block for consistent read access of data, you have to ensure consistent data transfer in your system.

5.1.10.1 Parameters

Parameter	Declaration	Data type	Memory block	Description
FM_PERIOD_CH0	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +0
FM_PERIOD_CH1	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +4
FM_RISING_EDGES_CH0	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +8
FM_RISING_EDGES_CH1	INPUT	DWORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +12
FM_STATUS_CH0	INPUT	WORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +16
FM_STATUS_CH1	INPUT	WORD	I, Q, M, D, L	Actual value of frequency measurement module input address: +18
RESOLUTION_CH0	INPUT	DINT	I, Q, M, D, L	Channel 0: Resolution of the sensor
RESOLUTION_CH1	INPUT	DINT	I, Q, M, D, L	Channel 1: Resolution of the sensor
DONE	OUTPUT	BOOL	I, Q, M, D, L	Ready signal (TRUE = OK)
ERROR	OUTPUT	WORD	I, Q, M, D, L	Return value (0 = OK)
SPEED_CH0	OUTPUT	DINT	I, Q, M, D, L	Channel 0: Calculated rotational speed
SPEED_CH1	OUTPUT	DINT	I, Q, M, D, L	Channel 1: Calculated rotational speed

FM_PERIOD_CHx

This parameter contains the measured time value for channel 0 respectively channel 1. The content is to be consistent connected with address +0 respectively +4 of the input area of the frequency measurement module, via the according bus system.

FM_RISING_EDGES_CHx

This parameter contains the determined number of rising edges for channel 0 respectively channel 1. The content is to be consistent connected with address +8 respectively +12 of the input area of the frequency measurement module, via the according bus system.

FM_STATUS_CHx This parameter contains the status of channel 0 respectively channel 1. The content is to be consistent connected with address +16 respectively +18 of the input area of the frequency measurement module, via the according bus system.

RESOLUTION_CHx Enter here the resolution in increments per revolution for the corresponding channel.

DONE Ready signal of the function

- TRUE: Function was finished without error.
- FALSE: Function is not active respectively there is an error.

SPEED_CHx Currently determined rotational speed of the corresponding channel in revolutions per minute (rpm).

ERROR (Return value) The following codes can be returned:

Code	Description
0x0000	No error
0x80D0	Channel 0 not in status active
0x80D1	Channel 1 not in status active
0x80D6	Channel 0: Input value RESOLUTION_CH0 = 0
0x80D7	Channel 1: Input value RESOLUTION_CH1 = 0
0x80D8	Channel 0: Input value RESOLUTION_CH0 < 0
0x80D9	Channel 1: Input value RESOLUTION_CH1 < 0
0x80DA	Channel 0: Measured time value = 0
0x80DB	Channel 1: Measured time value = 0
0x80DC	Channel 0: Measured time value < 0
0x80DD	Channel 1: Measured time value < 0
0x80DE	Channel 0: Measured time value > 0x7FFFFFFF
0x80DF	Channel 1: Measured time value > 0x7FFFFFFF
0x80E2	Channel 0: Determined number of edges < 0
0x80E3	Channel 1: Determined number of edges < 0
0x80E4	Channel 0: Determined number of edges > 0xFFFFFFFF
0x80E5	Channel 1: Determined number of edges > 0xFFFFFFFF
0x80E6	Channel 0: Determined rotational speed > max (DINT)
0x80E7	Channel 1: Determined rotational speed > max (DINT)
0x80E8	Channel 0: No valid measurement within the entered measurement period.
0x80E9	Channel 1: No valid measurement within the entered measurement period.

5.2 Energy Measurement

5.2.1 FB 325 - EM_COM_1 - Communication with 031-1PA00

Overview

This module enables the communication with the module 031-1PA00 for energy metering and power measurement. For the communication a data block is necessary. Here the DB gets its structure from the UDT 325 EM_COM_1. The block has the following functionalities:

- Load default parameters after start-up
- Storage of parameters, limit values, measured values and messages
- Transfer of consistent measured values
- Definition of the measured values by means of an UDT structure
- Communication by means of telegram type and ID
- Functional diagnostics, connection monitoring and error message evaluation

Parameter

Parameter	Declaration	Data type	Description
MODE	INPUT	BYTE	<ul style="list-style-type: none"> ■ 0x01 = Data exchange via process data Currently only the MODE = 1 is supported
CHANNEL_IN	INPUT	ANY	Pointer to the input data <ul style="list-style-type: none"> ■ With MODE = 0x01 exclusively data type BYTE and length 16 are permitted. Example: P#E100.0 BYTE 16 or P#DB10.DBX0.0 BYTE 16
CHANNEL_OUT	INPUT	ANY	Pointer to the output data <ul style="list-style-type: none"> ■ With MODE = 0x01 exclusively data type BYTE and length 16 are permitted. Example: P#A100.0 BYTE 16 or P#DB10.DBX16.0 BYTE 16
MEAS_DATA	IN_OUT	UDT	<ul style="list-style-type: none"> ■ UDT for the measured values ↗ <i>Chapter 5.2.2 'UDT 325 - EM_DATA_R1 - Data structure for FB 325' on page 29</i>

5.2.2 UDT 325 - EM_DATA_R1 - Data structure for FB 325

UDT - Header

Name	Declaration	Data type	Description
Timeout	INPUT	TIME	<ul style="list-style-type: none"> ■ Timeout for reading measured values
Polltime	INPUT	TIME	<ul style="list-style-type: none"> ■ Interval for the periodic reading
Control_Global	INPUT	BYTE	0: de-activated, 1: activated <ul style="list-style-type: none"> ■ Bit 0: Periodic execution according to the <i>Polltime</i> (default) ■ Bit 1: Immediate execution - bit is to be reset after the execution. ■ Bit 6 ... 2: reserved ■ Bit 7: Re-initialization of the block by the configuration is sent again

Name	Declaration	Data type	Description
Status_Global	OUTPUT	BYTE	Block status <ul style="list-style-type: none"> 0x00: Not processed 0x01: In process (BUSY) 0x02: Ready without error (DONE) 0x80: Error on processing (ERROR)
Status Alarm_Global	OUTPUT	BYTE	Corresponds to B3: Header byte 3 - <i>Common status</i> <ul style="list-style-type: none"> Bit 0: Frequency F_{MAX} exceeded Bit 1: Frequency F_{MIN} undershot Bit 2: Temperature T_{MAX} exceeded Bit 3: Voltage $VRMS_{MAX}$ exceeded Bit 4: Voltage $VRMS_{MIN}$ undershot Bit 5: Efficiency PF_{MIN} undershot Bit 6: Current $IRMS_{MAX}$ exceeded Bit 7: reserved
Cmd	INPUT	BYTE	0: de-activated, 1: activated <ul style="list-style-type: none"> Bit 0: Reset the energy counters Bit 1: Trigger Reset at current transformer Bit 2: Reset <i>status measurement</i> <ul style="list-style-type: none"> If several bits are set, they are sequentially processed.
Status_Cmd	OUTPUT	BYTE	Status command <ul style="list-style-type: none"> 0x00: Not processed 0x01: In process (BUSY) 0x02: Ready without error (DONE) 0x80: Error on processing (ERROR)
Jobtime	OUTPUT	TIME	<ul style="list-style-type: none"> Duration to read the measured values respectively to run a command
DsID	OUTPUT	BYTE	Number of the current DS-ID
Frame_ID	OUTPUT	BYTE	Number of the current FR-ID
Error_ID	OUTPUT	WORD	Detailed error information
Reserved		ARRAY of BYTE (1...28)	reserved

UDT - data

After the header data, in the UDT there are the measurands sequentially listed with the following structure:

Name	Declaration	Data type	Description
<i>Name</i>	IN_OUT	STRUCT	<ul style="list-style-type: none"> Name of the measurand
Read_Mode	INPUT	BYTE	<ul style="list-style-type: none"> Bit 0: Accessing the measured value <ul style="list-style-type: none"> 0: Measured value is not read 1: Measured value is read
Value	OUTPUT	DWORD	<ul style="list-style-type: none"> Current measured value

ERROR IDs

ERROR ID	Description
0x0000	no error
0x8070	Error: Parameter MODE
0x8073	Error: Parameter CHANNEL_IN does not match MODE
0x8074	Error: Parameter CHANNEL_OUT does not match MODE
0x8080	Error: Write parameter: Data length is beyond 1 or 2 byte
0x8081	Error: Write parameter: Timeout detected when writing
0x8091	Error: Read measured value: Timeout detected when reading
0x80A1	Error: Telegram type not available - invalid request
0x80A2	Error: Frame not defined
0x80A3	Error: Measurand not available
0x80A4	Error: Telegram length
0x80A5	Error: Frame too big
0x80A6	Error: No new measured values available
0x80A7	Error: DS-ID
0x80A8	Error: "CMD Frame" - Command could not be executed
0x80AF	Internal error - Please contact the hotline! On an internal error (0x0F) all the measurements are stopped and a reset to the default parameters of the module is triggered! Here all counter values and Frame definitions are deleted!

5.3 Motion Modules**5.3.1 FB 320 - ACYC_RW - Acyclic access to the System SLIO motion module****Description**

With this block you can access the object dictionary of the System SLIO motion modules by means of your user program. Here the block uses an acyclic communication channel based on a request/response sequence. This is part of the input/output area of motion module.



Due to the blocks FB 320 and FB 321 access the same data base, for each channel (if multichannel) you can use only one of these blocks in your user program! Also this block must be called per cycle only once!

Parameters

Parameter	Declaration	Data type	Description
REQUEST	IN	BOOL	The job is started with edge 0-1.
MODE	IN	BYTE	Enter 0x01 for the acyclic protocol
COMMAND	IN	BYTE	0x11 = Reading a data object (max. 4byte) 0x21 = Writing a data object (max. 4byte)
INDEX	IN	WORD	Index of the object

Parameter	Declaration	Data type	Description
SUBINDEX	IN	BYTE	Subindex of the object
WRITE_LENGTH	IN	DINT	Length of the data to be written in byte (max. 4byte)
WRITE_DATA	IN	ANY	Pointer to the data to be written.
READ_DATA	IN	ANY	Pointer to the received data.
CHANNEL_IN	IN	ANY	Pointer to the beginning of the acyclic channel in the input area of the motion module. Enter as length 10bytes. Examples P#E100.0 BYTE 10 or P#DB10.DBX0.0 BYTE 10
CHANNEL_OUT	IN	ANY	Pointer to the beginning of the acyclic channel in the output area of the motion module. Enter as length 8bytes. Examples P#A100.0 BYTE 8 or P#DB10.DBX10.0 BYTE 8
READ_LENGTH	OUT	Dint	Length of the received data in byte. This value is to be rounded up to a multiple of 4, because the length specification is not transmitted.
DONE	OUT	BOOL	1: Job has been executed without error
BUSY	OUT	BOOL	0: There is no job being executed 1: Job is currently being executed
ERROR	OUT	BOOL	0: No Error 1: There is an error. The cause of the error is shown on the <i>ERROR_ID</i> parameter
ERROR_ID	OUT	WORD	Detailed error information



Please note that the parameters *WRITE_DATA* and *READ_DATA* are not checked for data type and length!

Behavior of the block parameters

- Exclusiveness of the outputs
 - The outputs *BUSY*, *DONE* and *ERROR* are mutually exclusive. There can only one of these outputs be TRUE at the same time.
 - As soon as the input *REQUEST* is TRUE, one of the outputs must be TRUE.
- Output status
 - The outputs *DONE*, *ERROR*, *ERROR_ID* and *READ_LENGTH* are reset by an edge 1-0 at the input *REQUEST*, when the function block is not active (*BUSY* = FALSE).
 - An edge 1-0 at *REQUEST* does not affect the job processing.
 - If *REQUEST* is already reset during job processing, so it is guaranteed that one of the outputs is set at the end of the command for a PLC cycle. Only then the outputs are reset.
- Input parameter
 - The input parameters are taken with edge 0-1 at *REQUEST*. To change parameters, you have to trigger the job again.
 - If there is again an edge 0-1 at *REQUEST* during the job processing, an error is reported, no new command is activated and the answer rejected by the current command!

- Error handling
 - The block has 2 error outputs for displaying errors during order processing. `ERROR` indicates the error and `ERROR_ID` shows an additional error number.
 - The outputs `DONE` and `READ_LENGTH` designates a successful command execution and are not set when `ERROR` becomes TRUE.
- Behavior of the `DONE` output
 - The `DONE` output is set, when a command was successfully executed.
- Behavior of the `BUSY` output
 - The `BUSY` output indicates that the function block is active.
 - Busy is immediately set with edge 0-1 of `REQUEST` and will not be reset until the job was completed successfully or failed.
 - As long as `BUSY` is TRUE, the function block must be called cyclically to execute the command.









If there is again an edge 0-1 at `REQUEST` during the job processing, an error is reported, no new command is activated and the answer rejected by the current command!

ERROR_ID

ERROR_ID	Description
0x0000	There is no Error
0x8070	Faulty parameter <code>MODE</code>
0x8071	Faulty parameter <code>COMMAND</code>
0x8072	Parameter <code>WRITE_LENGTH</code> exceeds the maximum size
0x8073	Parameter <code>CHANNEL_IN</code> does not fit the parameter <code>MODE</code>
0x8074	Parameter <code>CHANNEL_OUT</code> does not fit the parameter <code>MODE</code>
0x8075	Impermissible command (edge 0-1 at <code>REQUEST</code> during job is executed)
0x8081	Error - read access - data do not exist Command rejected!
0x8091	Error - write access - data do not exist Command rejected!
0x8092	Error - write access - data out of range Command rejected!
0x8093	Error - write access - data can only be read Command rejected!
0x8094	Error - write access - data are write protected Command rejected!
0x8099	Error during acyclic communication Command rejected!

Program code

If no job is active, all output parameters must be set to 0 (Command = IDLE). With an edge 0-1 at *REQUEST*, with the following approach a job is activated:

1.  Check if a job is already active, if necessary terminate job and output error.
 - ⇒ Wait until Status = IDLE
2.  Check input parameters:
 - MODE
 - COMMAND
 - WRITE_LENGTH
 - CHANNEL_IN
 - CHANNEL_OUT
 - ⇒ Terminate job on error, otherwise continue with step 3.
3.  Save input parameters internally.
4.  Execute the desired command and wait until this has been carried out.
5.  Save and output the result of the command execution internally.
6.  Set the command to IDLE again.

5.3.2 FB 321 - ACYC_DS - Acyclic parametrization System SLIO motion module**Description**

With this block you can parametrize you motion module motion module by means of your user program. Here you can store your parameters as *Object list* in a data block and transfer them via the acyclic communication channel in your motion module



Due to the blocks FB 320 and FB 321 access the same data base, for each channel (if multichannel) you can use only one of these blocks in your user program! Also this block must be called per cycle only once!

Parameter

Parameter	Declaration	Data type	Description
REQUEST	IN	BOOL	The job is started with edge 0-1.
MODE	IN	BYTE	Enter 0x01 for the acyclic protocol.
READ_BACK	IN	BOOL	0: Written objects are not read back. 1: Written objects are read back immediately after the write operation and compared.
GROUP	IN	WORD	0x01...0x7F: Selection of a group in the object list. 0xFF: Section of all the objects in the object list.
OBJECT_DATA	IN	ANY	Pointer to the UDT. ↪ <i>Chapter 5.3.3 'UDT 321 - ACYC_OBJECT-DATA - Data structure for FB 321' on page 37</i>
CHANNEL_IN	IN	ANY	Pointer to the beginning of the input data of the <i>Acyclic channel</i> of the motion module.
CHANNEL_OUT	IN	ANY	Pointer to the beginning of the output data of the <i>Acyclic channel</i> of the motion module.
DONE	OUT	BOOL	1: Job has been executed without error.

Parameter	Declaration	Data type	Description
BUSY	OUT	BOOL	0: There is no job being executed. 1: Job is currently being executed.
DATASET_INDEX	OUT	INT	Object that is currently being processed.
ERROR	OUT	BOOL	0: No Error 1: There is an error. The cause of the error is shown on the <i>ERROR_ID</i> parameter.
ERROR_ID	OUT	WORD	Detailed error information


Behavior of the block parameters

- Exclusiveness of the outputs:
 - The outputs *BUSY*, *DONE* and *ERROR* are mutually exclusive. There can only one of these outputs be TRUE at the same time.
 - As soon as the input *REQUEST* is TRUE, one of the outputs must be TRUE.
- Output status
 - The outputs *DONE*, *ERROR*, *ERROR_ID* and *DATASET_INDEX* are reset by an edge 1-0 at the input *REQUEST*, when the job is finished.
 - If *REQUEST* is already reset during job processing, so it is guaranteed that the whole object list is processed.
 - At the end of the job with no error, *DONE* is set for one PLC cycle. Only then the outputs are reset.
- Input parameter
 - The input parameters are taken with edge 0-1 at *REQUEST*. To change parameters, you have to trigger the job again.
 - If there is again an edge 0-1 at *REQUEST* during the job, an error is reported (invalid command sequence) and the processing of the object list is finished.
- Input parameter *READ_BACK*
 - With activated parameter *READ_BACK* written objects are read back immediately after the write operation by a read job.
 - The written and read values are compared.
If they are identical, the next object is handled
If they are not identical, an error message (*ERROR ID* = 0x8079) is returned and the development of the object list is finished.
- Input parameter *GROUP*
 - For a better structure you can assign a group to each object.
 - Via *GROUP* you define the group whose parameters are to be transferred.
0x01...0x7F: Transfer the objects of the selected group.
0xFF: Transfer the objects of all the groups.
- Error handling
 - The block has error outputs to show errors during job processing. *ERROR* indicates the error, *ERROR_ID* shows an additional error number and *DATASET_INDEX* informs at which object the error occurred.
 - The output *DONE* designates a successful job execution and is not set when *ERROR* becomes TRUE.
- Behavior of the *DONE* output
 - The *DONE* output is set, when a command was successfully executed.

- Behavior of the *BUSY* output
 - The *BUSY* output indicates that the function block is active.
 - *BUSY* is immediately set with edge 0-1 of *REQUEST* and will not be reset until the job was completed successfully or failed.
 - As long as *BUSY* is TRUE, the function block must be called cyclically to execute the command.
- Behavior of the *DATASET_INDEX* output
 - The *DATASET_INDEX* output indicates, which object of the object list is currently being processed.
 - If there is no job active, *DATASET_INDEX* = 0 is returned.
 - If there is an error during the object processing, *DATASET_INDEX* shows the faulting object.

i *If there is again an edge 0-1 at REQUEST during the job processing, an error is reported (ERROR_ID = 0x8075), no new command is activated and the answer rejected by the current command!*

Status diagram

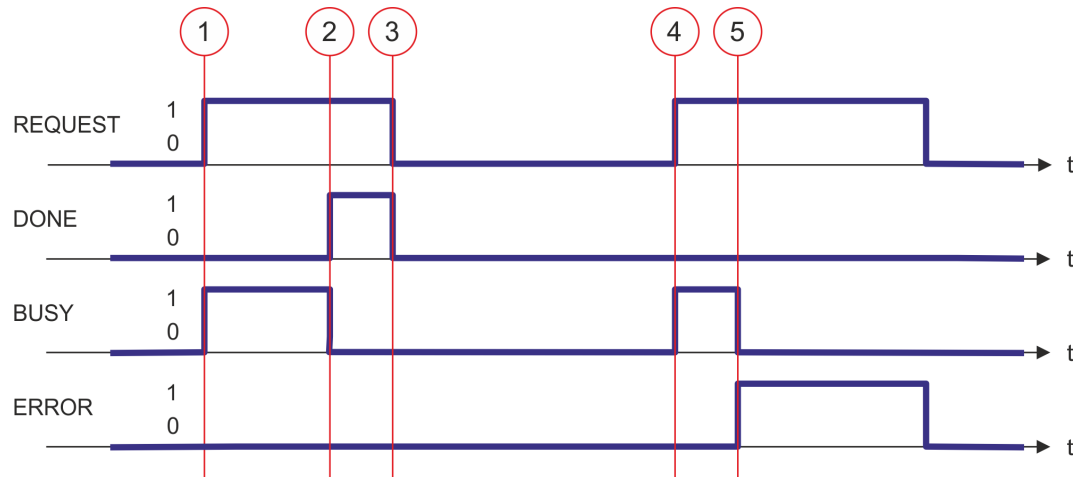

- (1) The job is started with edge 0-1 at *REQUEST* and *BUSY* becomes TRUE.
- (2) At the time (2) the job is completed. *BUSY* has the value FALSE and *DONE* den value TRUE.
- (3) At the time (3) the job is completed and *REQUEST* becomes FALSE and thus each output parameter FALSE respectively 0.
- (4) At the time (4) with an edge 0-1 at *REQUEST* the job is started again and *BUSY* becomes TRUE.
- (5) At the time (5) an error occurs during the job. *BUSY* has the value FALSE and *ERROR* den value TRUE.

ERROR_ID

ERROR_ID	Description
0x0000	There is no Error
0x8070	Faulty parameter <i>MODE</i>
0x8071	Faulty parameter <i>OBJECT_DATA</i>
0x8075	Invalid command (edge 0-1 at <i>REQUEST</i> during job is executed)
0x8078	Faulty parameter <i>GROUP</i>
0x8079	<i>READ_BACK</i> detects an error (written and read value unequal)
0x807A	Pointer at <i>OBJECT_DATA</i> not valid



Within the function block the FB 320 is called. Here, any error of the FB 320 is passed to the FB 321. ↪ 'ERROR_ID' on page 33

5.3.3 UDT 321 - ACYC_OBJECT-DATA - Data structure for FB 321

Data structure for the object list

The parameters are to be stored in a data block as *object list*, which consists of individual *objects*. The structure of an *objects* is defined via an UDT.

Structure of an object

Variable	Declaration	Data type	Description
Group	IN	WORD	$0 < Group < 0x80$ permitted
COMMAND	IN	BYTE	0x11 = Read from the object list 0x21 = Write to the object list
Index	IN	WORD	Index of the object
Subindex	IN	BYTE	Subindex of the object
Write_Length	IN	BYTE	Length of the data to be written in byte
Data_Write	IN	DWORD	Data to be written.
Data_Read	OUT	DWORD	Read data
State	OUT	BYTE	0x00 = never processed 0x01 = <i>BUSY</i> - in progress 0x02 = <i>DONE</i> - successfully processed 0x80 = <i>ERROR</i> - an error has occurred during the processing



Please note that you always specify the appropriate length for the object during a write job!

Example DB

Addr.	Name	Type	Start value	Current value	Comment
0.0	Object(1).Group	WORD			1. Object
2.0	Object(1).Command	BYTE			
4.0	Object(1).Index	WORD			
6.0	Object(1).Subindex	BYTE			
7.0	Object(1).Write_Length	BYTE			
8.0	Object(1).Data_Write	DWORD			
12.0	Object(1).Data_Read	DWORD			
16.0	Object(1).State	BYTE			

WLD > FB 241 - RAM_to_autoload.wld - RAM to autoload.wld

Addr.	Name	Type	Start value	Current value	Comment
18.0	Object(2).Group	WORD			2. Object
...			
34.0	Object(2).State	BYTE			3. Object
36.0	Object(3).Group	WORD			
...			
52.0	Object(3).State	BYTE			...
...			

5.4 WLD

5.4.1 FB 240 - RAM_to_s7prog.wld - RAM to s7prog.wld

Description

With *REQ* = TRUE this block copies the currently loaded project of a CPU on an inserted memory card as s7prog.wld. With a SPEED7 CPU from VIPA the s7prog.wld is automatically read from an inserted memory card always after an overall reset. The FB 240 internally calls the block SFB 239 with the corresponding parameters. Here the values of *BUSY* and *RET_VAL* are returned from the SFB 239 to the FB 240.

Parameter

Name	Declaration	Data type	Memory area	Description
REQ	IN	BOOL	I, Q, M, D, L	Function request with <i>REQ</i> = 1
BUSY	OUT	BOOL	I, Q, M, D, L	Return value of the SFB 239
RET_VAL	OUT	WORD	I, Q, M, D, L	Return value of the SFB 239

5.4.2 FB 241 - RAM_to_autoload.wld - RAM to autoload.wld

Description

With *REQ* = TRUE this block copies the currently loaded project of a CPU on an inserted memory card as autoload.wld. With a SPEED7 CPU from VIPA the s7prog.wld is automatically read from an inserted memory card always after PowerON. The FB 241 internally calls the block SFB 239 with the corresponding parameters. Here the values of *BUSY* and *RET_VAL* are returned from the SFB 239 to the FB 241.

Parameter

Name	Declaration	Data type	Memory area	Description
REQ	IN	BOOL	I, Q, M, D, L	Function request with <i>REQ</i> = 1
BUSY	OUT	BOOL	I, Q, M, D, L	Return value of the SFB 239
RET_VAL	OUT	WORD	I, Q, M, D, L	Return value of the SFB 239


5.5 Onboard I/O System 100V

5.5.1 SFC 223 - PWM - Pulse duration modulation

Description This block serves the parameterization of the pulse duration modulation for the last two output channels of X5.


Parameters

Name	Declaration	Type	Description
CHANNEL	IN	INT	Number of the output channel for PWM
ENABLE	IN	BOOL	Start bit of the job
TIMEBASE	IN	INT	Time base
PERIOD	IN	DINT	Period of the PWM
DUTY	IN	DINT	Output value per mille
MINLEN	IN	DINT	Minimum pulse duration
RET_VAL	OUT	WORD	Return value (0 = OK)

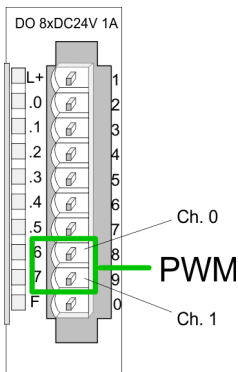

→ You define a time base, a period, the pulse duty ratio and min. pulse length. The CPU determines a pulse series with an according pulse/break relation and issues this via the according output channel.

⇒ The SFC returns a certain error code. You can see the concerning error messages in the table at the following page. The PWM parameters have the following relationship:

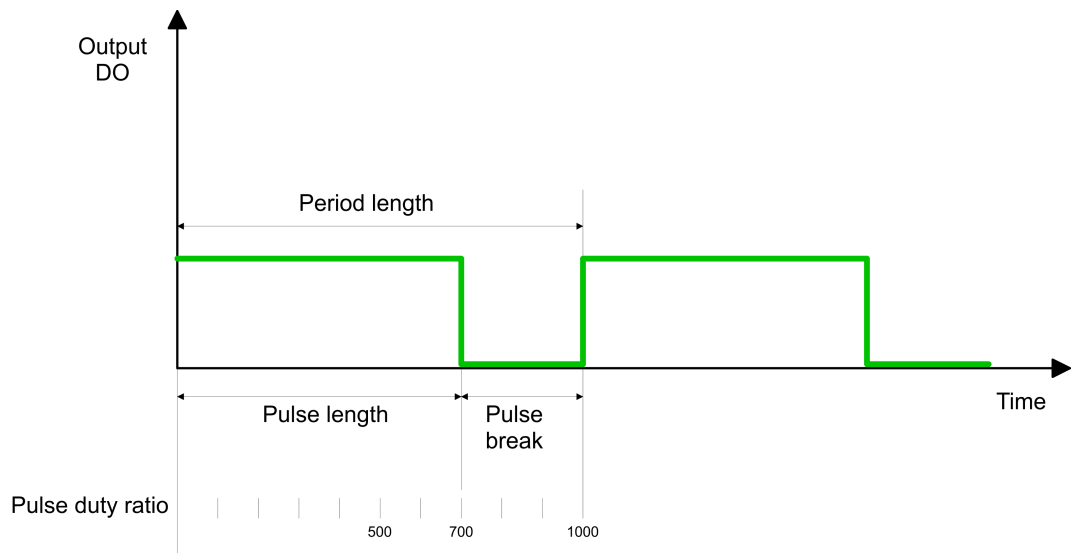

$$\text{Period length} = \text{time base} \times \text{period}$$

$$\text{Pulse length} = (\text{period length} / 1000) \times \text{pulse duty ratio}$$

$$\text{Pulse break} = \text{period length} - \text{pulse length}$$

The parameters have the following meaning:

CHANNEL

- Define the output channel that you want to address.
 - Value range: 0 ... 1

- ENABLE**
- Via this parameter you may activate the PWM function (true) res. deactivate it (false).
 - Value range: true, false
- TIMEBASE**
- *TIMEBASE* defines the resolution and the value range of the pulse, period and minimum pulse length per channel.
 - You may choose the values 0 for 0.1ms and 1 for 1ms.
 - Value range: 0 ... 1
- PERIOD**
- Through multiplication of the value defined at period with the *TIMEBASE* you get the period length.
 - Value range: 0 ... 60000
- DUTY**
- This parameter shows the pulse duty ratio per mille. Here you define the relationship between pulse length and pulse break, concerned on one period.
 - 1 per mille = 1 *TIMEBASE*
 - If the calculated pulse duration is no multiplication of the *TIMEBASE*, it is rounded down to the next smaller *TIMEBASE* limit.
 - Value range: 0 ... 1000
- MINLEN**
- Via *MINLEN* you define the minimal pulse length. Switches are only made, if the pulse exceeds the here fixed minimum length.
 - Value range: 0 ... 60000
- RET_VAL (Return Value)**
- Via the parameter *RET_VAL* you get an error number in return. See the table below for the concerning error messages:

Value	Description
0000h	no error
8005h	Parameter <i>MINLEN</i> outside the permissible range
8006h	Parameter <i>DUTY</i> outside the permissible range
8007h	Parameter <i>PERIOD</i> outside the permissible range
8008h	Parameter <i>TIMEBASE</i> outside the permissible range
8009h	Parameter <i>CHANNEL</i> outside the permissible range.
9001h	Internal error - There was no valid address for a parameter.
9002h	Internal hardware error - Please contact the hotline.
9003h	Output is not configured as PWM output respectively there is an error in hardware configuration.
9004h	HF-PWM was configured but SFC 223 was called (please use SFC 225 HF_PWM!).

5.5.2 SFC 224 - HSC - High-speed-Counter

Description This SFC serves for parameterization of the counter functions (high speed counter) for the first 4 inputs.

Parameters

Name	Declaration	Type	Description
CHANNEL	IN	INT	Number of the input channel for HSC
ENABLE	IN	BOOL	Start bit of the job
DIRECTION	IN	INT	Direction of counting
PRESETVALUE	IN	DINT	Preset value
LIMIT	IN	DINT	Limit for counting
RET_VAL	OUT	WORD	Return value (0 = OK)
SETCOUNTER	IN_OUT	BOOL	Load preset value

CHANNEL

- Type the input channel that you want to activate as counter.
 - Value range: 0 ... 3

ENABLE

- Via this parameter you may activate the counter (true) res. deactivate it (false).
 - Value range: true, false

DIRECTION

- Fix the counting direction.
 - Hereby is:
 - 0: Counter is deactivated, means *ENABLE* = false
 - 1: count up
 - 2: count down

PRESETVALUE

- Here you may preset a counter content, that is transferred to the according counter via *SETCOUNTER* = true.
 - Value range: 0 ... FFFFFFFFh

LIMIT

- Via Limit you fix an upper res. lower limit for the counting direction (up res. down). When the limit has been reached, the according counter is set zero and started new. If necessary an alarm occurs.
 - Value range: 0 ... FFFFFFFFh

RET_VAL (Return Value)

Via the parameter *RET_VAL* you get an error number in return. See the table below for the concerning error messages:

Value	Description
0000h	No error
8002h	The chosen channel is not configured as counter (Error in the hardware configuration).
8008h	Parameter <i>DIRECTION</i> outside the permissible range
8009h	Parameter <i>CHANNEL</i> outside the permissible range
9001h	Internal error - There was no valid address for a parameter.
9002h	Internal hardware error - Please contact the hotline.

SETCOUNTER

- Per *SETCOUNTER* = true the value given by PRESETVALUE is transferred into the according counter.
- The bit is set back from the SFC.
 - Value range: true, false


5.5.3 SFC 225 - HF_PWM - HF pulse duration modulation

Description

This block serves the parameterization of the pulse duration modulation for the last two output channels. This block is function identical to SFC 223. Instead of *TIMEBASE* and *PERIOD*, the SFC 225 works with a predefined frequency (up to 50kHz).


Parameters

Name	Declaration	Type	Description
CHANNEL	IN	INT	Number of the output channel for HF-PWM
ENABLE	IN	BOOL	Start bit of the job
FREQUENCY	IN	WORD	Frequency of the HF-PWM
DUTY	IN	DINT	Pulse duty ratio per mille
MINLEN	IN	DINT	Minimum pulse duration
RET_VAL	OUT	WORD	Return value (0 = OK)

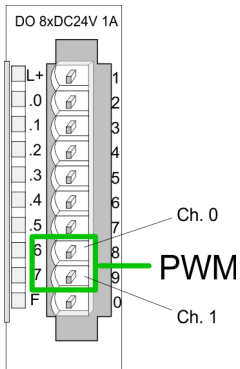

→ You define a time base, a period, the pulse duty ratio and min. pulse length. The CPU determines a pulse series with an according pulse/break relation and issues this via the according output channel.

⇒ The SFC returns a certain error code. You can see the concerning error messages in the table at the following page. The PWM parameters have the following relationship:

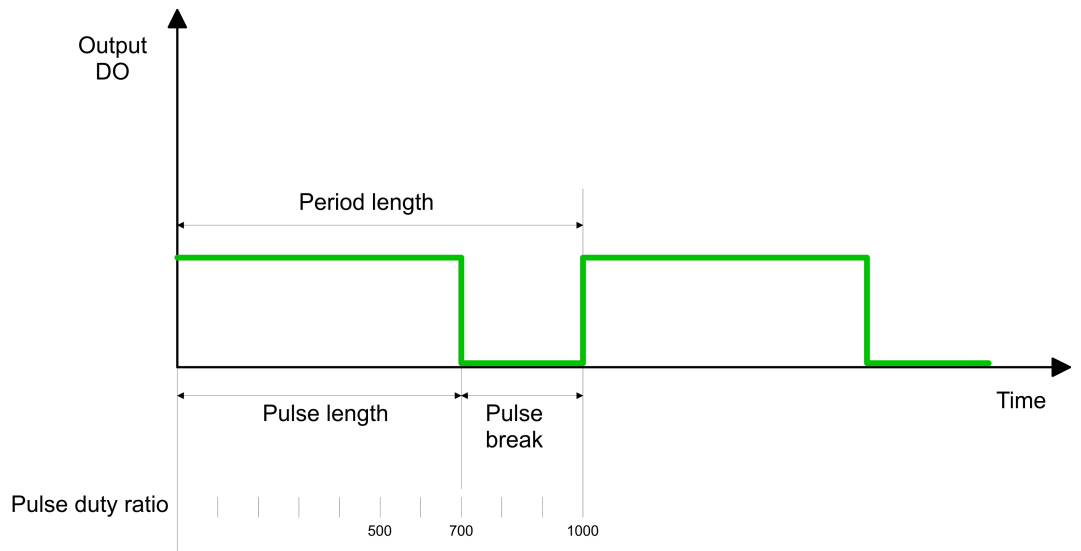

Period length = 1 / frequency

Pulse length = (period length / 1000) x pulse duty ratio

Pulse break = period length - pulse length

- CHANNEL**
- Define the output channel that you want to address.
 - Value range: 0 ... 1
- ENABLE**
- Via this parameter you may activate the PWM function (true) res. deactivate it (false).
 - Value range: true, false
- FREQUENCE**
- Type in the frequency in Hz as hexadecimal value.
 - Value range: 09C4h ... C350h (2,5kHz ... 50kHz)
- DUTY**
- This parameter shows the pulse duty ratio per mille. Here you define the relationship between pulse length and pulse break, concerned on one period.
 - 1 per mille = 1 *TIMEBASE*
 - If the calculated pulse duration is no multiplication of the *TIMEBASE*, it is rounded down to the next smaller *TIMEBASE* limit.
 - Value range: 0 ... 1000
- MINLEN**
- Via *MINLEN* you define the minimal pulse length in μ s. Switches are only made, if the pulse exceeds the here fixed minimum length.
 - Value range: 0 ... 60000
- RET_VAL (Return Value)** Via the parameter *RET_VAL* you get an error number in return. See the table below for the concerning error messages:

Value	Description
0000h	no error
8005h	Parameter <i>MINLEN</i> outside the permissible range
8006h	Parameter <i>DUTY</i> outside the permissible range
8007h	Parameter <i>FREQUENCE</i> outside the permissible range
8008h	Parameter <i>TIMEBASE</i> outside the permissible range
8009h	Parameter <i>CHANNEL</i> outside the permissible range.
9001h	Internal error - There was no valid address for a parameter.
9002h	Internal hardware error - Please contact the hotline.
9003h	Output is not configured as PWM output respectively there is an error in hardware configuration.
9004h	HF-PWM was configured but SFC 223 was called (please use SFC 225 HF_PWM!).